


Single Door Retractable Screen Installation

STEP 1

Place the **HOUSING** into the door jamb (Diagram #1-1). Slide the **TOP TRACK** into the **HOUSING** (Diagram #1-2). After you have inserted the **TOP TRACK** into the **HOUSING**, place one screw (Diagram #2-1) into the **TOP TRACK** to hold the housing in place.

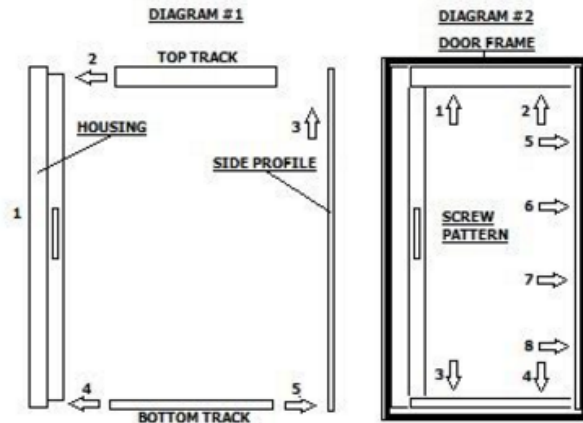


STEP 2

Slide the **SIDE PROFILE** upward into the **TOP TRACK** (Diagram #1-3).

STEP 3

Slide the **BOTTOM TRACK** into the **HOUSING** (Diagram #1-4). Pull the **BOTTOM TRACK** on the other side outward and insert it into the **SIDE PROFILE** (Diagram #1-5) and then slide the **BOTTOM TRACK** back into the door jamb.

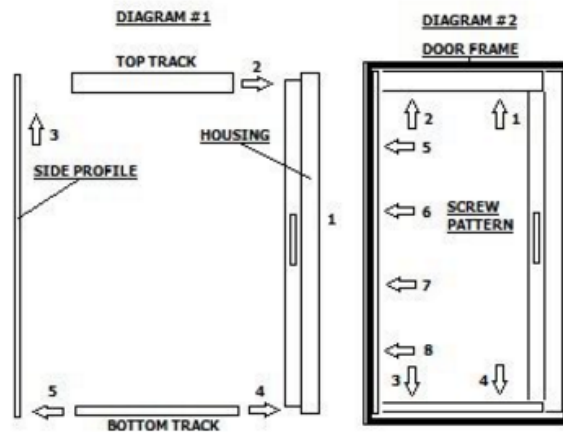

STEP 4

Make sure the screen is aligned within the door jamb, and then insert the **SCREWS** in the order shown (Diagram #2-2 thru #2-8).

Note: The top diagram is for a left side door mount. The bottom diagram is for a right side door mount. Choose the side you will be mounting the screen.